

 
Access control configuration

Document number: PO-223-EN Version: 1.0 Date of publication: October 23, 2024

To configure access control methods, select the M-DOT-R14 module on the main tab *DEVICES*, go to the gear icon and then to the sub-tab *Access Control*. In the top menu, the options *Add PIN* and *Add card* are available.



The logic in the access control is added using events. For example, correctly entering PIN number 1 from the list will trigger event number 254. You can also enter an action schedule for each access attempt thanks to the field *TIME OF OPERATION*. There is also a tool in the top bar that allows new data to be sent to multiple modules at once (field *Choose device*).




To add a card to the memory after selecting the Add card button in the new line, select the card icon,



and then hold the card up to the reader so that its number appears in the Designer.


Once all accesses have been added, it is necessary to press Send parameters to the module.

For the M-DOT-R14 panel, the authorisation sound can be configured in the *Parameters* sub-tab (e.g. whether there should be a sound only after accepting the code) and automatic PIN acceptance e.g. after entering 6 digits.

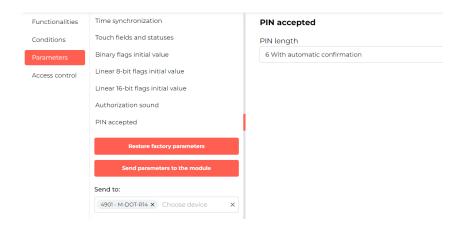


Configuration in the mobile application

Access methods can also be configured in the mobile app. To add or edit accesses, add a new object to the location of your choice.

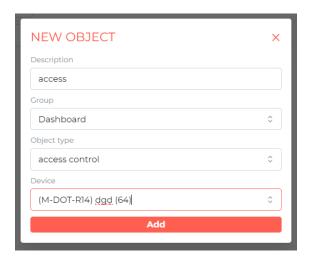

And set its type as Access Control.

 

Once the new settings have been saved from the *LOGIC* tab, it is now possible to view the access entries and add more directly from the mobile app also with the possibility to edit access schedules.

