

Coolmaster HVAC unit configuration guide

Document number: PO-231-EN Version: 1.0 Date of publication: March 31, 2025

The IP-accessible Coolmaster unit can be controlled from the Ampio UNI mobile app.

Activating the Telnet client

Using Windows as an example, start by entering Control Panel, then Programs and Features.

Select Turn Windows features on or off.



If the Telnet client is not active then select it and press OK.



You may need to restart your computer after activation.

Connecting to the unit

The IP address and port must be read from the HVAC unit.

Settings Network settings				
💠 Back to	Settings			
IP	192.168.1.2			
Netmask	255.255.255.0	>		
Gateway	192.168.1.1	>		
Terminal Port	10102	1		
¥1.0.0 28389611	12E3 192.168.1.2 🕊			

Open a Windows terminal, e.g. with the cmd command, and type telnet IP port.

C:\Windows\System32\cmd.exe				
Microsoft Windows [Version (c) Microsoft Corporation.	10.0.19045.4291] All rights reserved.			
C:\Windows\system32>telnet	192.168.1.2 10102			

Then type rest enable.

And rest port 8080.

A message OK, Boot required! should appear, so you will need to reset the Coolmaster unit.

Creating an object in the Ampio Designer

In the Ampio Designer, go to the APPLICATION tab and create a new object in any group with the settings:

- Object type A/C
- Temperature range at your discretion
- Step step change at your discretion
- Type Coolmaster
- URL IP address of Coolmaster unit
- Unit ID Coolmaster serial number
- Unit ID the number of the unit you wish to control.

Icon ON		Choose file
Object type	-	A/C \$
Temperature range	-	
Min	-	16
Max	-	30
Step	-	1°C \$
Туре	-	Coolmaster 0
URL	-	192.168.1.12
Device ID	-	283B961112E2
Unit ID	-	L7_105

Control from the Ampio UNI mobile application

Once the object has been saved, the air conditioning can now be controlled from the mobile app.

